

OWNER'S GUIDE

HYDROTECH®

ADVANCED REVERSE OSMOSIS WATER TREATMENT SYSTEMS



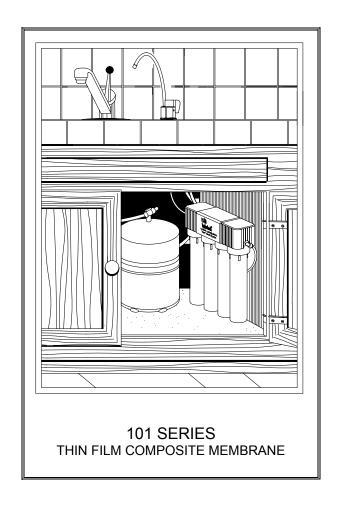

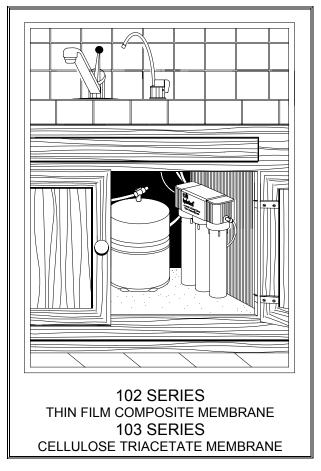

Hydrotech, Inc.

25555 West Avenue Stanford, Valencia, CA 91355 Phone (661) 294-8888 Fax (661) 294-8880

INTRODUCTION

SYSTEM CONFIGURATIONS

| | SYSTEM UNITARY MANIFOLD AND FILTER CARTRIDGES | | | | | | | | |
|-------------------------|---|----------------------------|------------|----------------------|-------------|---------------------|--|--|--|
| Model | Vessels | Sediment Filter | Pre-Filter | Membrane | Post-Filter | Output [†] | | | |
| 101 Series | 4 | String Wound Polypropylene | CTO Carbon | Thin Film Composite | CTO Carbon | 9, 15, 25, 35, 45 | | | |
| 102 Series [◊] | 3 | String Wound Polypropylene | None | Thin Film Composite | CTO Carbon | 9, 15, 25, 35, 45 | | | |
| 103 Series | 3 | String Wound Polypropylene | None | Cellulose Triacetate | CTO Carbon | 9, 15 | | | |

[†] Manufacturer's Reference Designation Only. Refer to Production and Recovery Rates table for certified output production rates.

◊ Production and Contaminant Reduction Performance Certification by NSF International is not applicable. This system is not available in California.

MODEL NUMBERS TABLE A

| GUIDE IS APPLICABLE TO HYDROTECH [®] REVERSE OSMOSIS DRINKING WATER TREATMENT SYSTEMS AS SPECIFIED IN THIS TABLE Select Claims, System, Output, Monitor, and Faucet. Assemble Respective Codes in Sequence. | | | | | | | | | | | | | | | | | | | | |
|--|--------|---------------------------------|---------------------------------------|-----------------|-------------------------------|--------|---------------------|-----------------------|-----------------|-----------------------|------------|-----------------------------------|-----------|-------|----------------|----|----|----|-------|----|
| Claims | | | | Cher | nical / | Mecha | anical | | | | | Chemical / Mechanical / Nitrate** | | | | | | | | |
| System Code | 101/10 | | 01/102 ⁰ /103Series 101/10 | | 02 ⁰ /103Series 10 | | | 101 Series | | | 101 Series | | | | | | | | | |
| Output Designation | 9 | 15 | 25 [‡] | 35 [‡] | 45 [‡] | 9 | 15 | 25 [‡] | 35 [‡] | 45 [‡] | 9 | 15 | 25 | 35 | 45 | 9 | 15 | 25 | 35 | 45 |
| Output Code | 03 | 04 | 05 [‡] | 06 [‡] | 07 [‡] | 03 | 04 | 05 [‡] | 06 [‡] | 07 [‡] | 03 | 04 | 05 | 06 | 07 | 03 | 04 | 05 | 06 | 07 |
| Monitor | Р | Pushbutton Smartap [®] | | Faucet Smartap® | | | Pushbutton Smartap® | | | Faucet Smartap® | | | | | | | | | | |
| Faucet | Chr | ome | S/S | or Pol | ymer | Chrome | | Chrome S/S or Polymer | | Chrome S/S or Polymer | | ymer | er Chrome | | S/S or Polymer | | | | | |
| Faucet Code | 0 | 01 | | 101* | | 00 | 02 | | 102* | | 00 | 03 | | 103** | | 00 |)4 | | 104** | |

Example: 4 vessel, Chemical/Mechanical Reduction, 25 GPD, Faucet Smartap[®], Polymer Faucet, NSF Listed is Model Number 10105102 **‡ 101 SERIES ONLY**

PRODUCTION AND RECOVERY RATES - 101 AND 103 SERIES

| * System Tested and Certified by NSF International against ANSI/NSF 58 as detailed on Performance Data Sheet | | | | | | | | |
|--|------------------------------|--------------------------------|--------------------------------|------------------------------|-------------------------------|--------------------------------|----------------------------------|--|
| Model | 10103 | 10104 | 10105 | 10106 | 10107 | 10303 | 10304 | |
| System Output | 19 Liters/day (5 gal/day) | 28 Liters/day (7.3 gal/day) | 29 Liters/day (7.5 gal/day) | 34 Liters/day (9 gal/day) | 45 Liters/day (12 gal/day) | 15.1 Liters/day (4 gal/day) | 29.5 Liters/day (7.6 gal/day) | |
| Recovery Rating*** | 34% | 25% | 21% | 24% | 24% | 26% | 34% | |

^{***} System has been tested and operates at the specified recovery rating under standard test conditions as specified in the Performance Data Sheet. The recovery rating is a percentage measure of the amount of influent water which is delivered as permeate under open permeate discharge conditions.

CONDITIONS FOR USE

THIN FILM COMPOSITE MEMBRANE

| Source Water Supply Profile | | Chemical Parameters | Max mg/L |
|----------------------------------|-----------------------------|--|-------------|
| Community/Private | Chlorinated/Non-Chlorinated | Hardness (CaCO ₃) | <350 |
| Feed Water Pressure ² | 242-690 kPa (35-100 psig) | Iron (Fe) | <0.1 |
| Temperature | 4°-38° C (40°-100° F) | Manganese (Mn) | <0.05 |
| pH Range | 3.0 - 11.0 | Hydrogen Sulfide (H ₂ S) | 0.00 |
| Maximum TDS Level | 2000 mg/L | Residual Chlorine (Cl2) | <2.0 |
| Turbidity | <1.0 NTU | Silt Density Index: Value stated in SDI units. | |
| Maximum SDI ¹ | <4.0 | 1. One Denoity index. Value stated | in obtaino. |

NOTE: 2. PRESSURE REGULATOR IS RECOMMENDED FOR FEED WATER PRESSURES EXCEEDING 552 kPa (80 psig).

INTRODUCTION

CERTIFIED CONTAMINANT REDUCTION PERFORMANCE – 101 AND 103 SERIES



| System Tested and Certified by NSF International against ANSI/NSF 58 for the reduction of | | | | | | | |
|---|----------------------------|-----------|-----------------|---------|--------------------|-------------|--|
| ARSENIC* | ASBESTOS | | ASBESTOS BARIUM | | CADMIUM | COPPER | |
| TRIV ALENT CHRO | HEXAV | ALENT CHR | ОМІИМ | CYSTS** | FLUORIDE | | |
| LEAD | LEAD NITRATES [†] | | RADIUM 226/228 | | SELENIUM | TURBIDITY | |
| CHLORINE - TASTE AND ODOR# | | | | | TOTAL DISSOLVED SC | DLIDS (TDS) | |

NOTE: Contaminant Reduction Performance is not applicable to 102 Series (Systems are not available in California).

- * Applicable to 101 Series only. This system shall be used for arsenic reduction on chlorinated water supplies containing detectable residual free chlorine at the system inlet. Water systems using an in-line chlorinator should provide a one minute chlorine contact time before th RO system.
- ** Certified for reduction of Cysts including Cryptosporidium parvum oocysts and cysts of Giardia and Entamoeba
- † 101 Series Only: This system is acceptable for treatment of influent concentrations of no more than 27 mg/L nitrate (NO₃) and 3-mg/L nitrite (NO₂) in combination measured as 7.8 mg/L nitrogen (N) and is certified for nitrate/nitrite reduction in water supplies with a pressure of 280 kPa (40 psig) or greater. This system is not available in California.
- # System Tested and Certified by NSF International against ANSI/NSF 42 to a product water capacity of 3000 gallons.

OPTIONS AND ACCESSORIES

| METAL OR POLYMER FAUCETS | PRESSURIZED PRODUCT WATER STORAGE TANKS |
|---|---|
| The product water faucets are available in Chrome-Plated Brass (EPA and Proposition 65 Compliant), Polished Stainless Steel, or a molded Polymer (five colors). Units are available with or without Light Bar. NSF Listed Systems require either a Stainless Steel or Polymer faucet as shown on Pages 10 and 11 of this Guide | Product Water Storage Tanks are available in Steel, Polypropylene, or Fiber-Reinforced Resin with nominal capacities of 7.8L /2 gal to 38.9L /10.3 gal. Tank Assemblies include shut-off valve and quick connect fittings. NSF Listed Systems require Approved Storage Tank Assemblies as shown on Page 14 of this Guide. |
| FAUCET ACTUATED SMARTAP® MONITOR | BOOSTER PUMP |
| Indicator lights appearing in a Light Bar report system status. Light Bar is located at faucet base (Chrome or Stainless Steel) or integrated into faucet body front cover (Polymer). It connects to electronics inside RO Module by a length of phone cord routed to terminal on manifold cover. | A booster pump may be used if system pressure is below 242 kPa (35 psi). Pump should be placed near RO Module and installed in feed water line just before it enters Module. Power supplies are available in a variety of voltages. |

Contact your Hydrotech® Dealer to purchase these items or to obtain more information.


CONDITIONS FOR USE

CELLULOSE TRIACETATE MEMBRANE

| Source Water Supply Profile | | Chemical Parameters | Max mg/L |
|----------------------------------|---------------------------|---------------------------------------|-------------|
| Community/Private | Chlorinated | Hardness (CaCO ₃) | <350 |
| Feed Water Pressure ² | 242-690 kPa (35-100 psig) | Iron (Fe) | <0.1 |
| Temperature | 4°-38° C (40°-100° F) | Manganese (Mn) | <0.05 |
| pH Range | 4.0 - 8.0 | Hydrogen Sulfide (H ₂ S) | 0.00 |
| Maximum TDS Level | 1500 mg/L | Residual Chlorine (Cl ₂) | 0.01-1.0 |
| Turbidity | <1.0 NTU | Silt Density Index: Value stated i | n SDI units |
| Maximum SDI ¹ | <4.0 | S Sensity mask. Value stated i | 02. a |

NOTE: 2. PRESSURE REGULATOR IS RECOMMENDED FOR FEED WATER PRESSURES EXCEEDING 552 kPa (80 psig).

INTRODUCTION

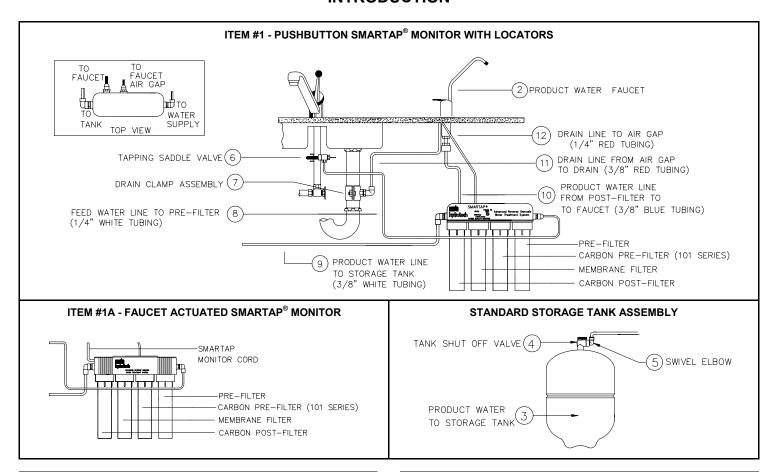

| | REVERSE OSMOSIS SYSTEM | | | | | | |
|--------------|---|--|--|--|--|--|--|
| Item | Description | Part No. | | | | | |
| 1 1A 2 | Pushbutton Smartap® Water Quality Monitor Faucet Actuated Smartap® Water Quality Monitor Product Water Faucet, Chrome or Stainless Steel Product Water Faucet, Polymer (Decorator Color) | Pg. I, Table A Pg. I, Table A Pg. 9, Fig. 9 Pg. 11, Fig. 11 | | | | | |

| | PRODUCT WATER STORAGE | | | | | | | |
|-------------|---|-----------------|--|--|--|--|--|--|
| Item | Description | Part No. | | | | | | |
| 3 4 5 | Product Water Storage Tank Assembly Tank, Product Water Storage Valve, Shut-Off Elbow, Stem | Pg. 14, Fig. 14 | | | | | | |

INSTALLATION KIT METAL FAUCET

| | INSTALLATION KIT POLYMER FAUCET | | | | | | |
|-------|---|----------|--|--|--|--|--|
| Item | Description | Part No. | | | | | |
| | Complete Kit | 42902026 | | | | | |
| 6 | Supply Valve Assembly, Saddle Tapping | 34900001 | | | | | |
| 7 | Drain Clamp Assembly, Saddle Clamp | 42000001 | | | | | |
| 8 | Tubing, 1/4" x 54" White | 20300014 | | | | | |
| 9 | Tubing, 3/8" x 60" White | 20300012 | | | | | |
| 10 | Tubing, 3/8" x 60" Blue | 20300013 | | | | | |
| 11 | Tubing, 3/8" x 60" Red (attached to faucet) | 20300018 | | | | | |
| 12 | Tubing, 1/4" x 48" Red (attached to faucet) | 20300015 | | | | | |
| n/s** | Screw, Mounting Bracket (2 each) | 32701002 | | | | | |
| | | | | | | | |

Owner's Guide, 101, 102, and 103 Series

| Item | Description | Part No. |
|-------|--|----------|
| | Complete Kit | 42902004 |
| 6 | Supply Valve Assembly, Saddle Tapping | 34900001 |
| 7 | Drain Clamp Assembly, Saddle Clamp | 42000001 |
| 8 | Tubing, 3/8" x 60" White | 20300012 |
| 9 | Tubing, 1/4" x 54" White | 20300014 |
| 10 | Tubing, 3/8" x 60" Blue | 20300013 |
| 11 | Tubing, 3/8" x 60" Red | 20300018 |
| 12 | Tubing, 1/4" x 48" Red | 20300015 |
| n/s** | Screw, Mounting Bracket (2 each) | 32701002 |
| | | _ |
| n/s** | Performance Data Sheet (101 Series NSF Listed) | 36101105 |
| n/s** | Performance Data Sheet (103 Series NSF | 36101183 |

n/s**

Listed)

36101005

^{**} not shown

Figure 1 Component and Interconnection Locators, 101, 102, and 103 Series

INSTALLATION REQUIREMENTS

READ THIS ENTIRE INSTALLATION AND SERVICE GUIDE BEFORE BEGINNING INSTALLATION

Hydrotech® 101 and 103 Series Reverse Osmosis (RO) Drinking Water Treatment Systems have been designed for ease of installation and serviceability. They are constructed with the finest materials available.

Using these instructions and paying close attention to parameters outlined within "CONDITIONS FOR USE" detailed on Page I will ensure a successful installation.

All systems must be installed in accordance with applicable city, state, and local plumbing codes. To insure a system continues to operate at its optimum level, it is necessary to have a routine maintenance and replacement schedule (Page 16). The frequency at which filters must be changed will depend on quality of feed water supply and level of system usage.

Hydrotech® RO systems contain a replaceable treatment component critical to effective reduction of Total Dissolved Solids (TDS). Product water shall be tested periodically to verify the system is performing properly.

Operator performs test using the Smartap® Water Quality Monitor.

PREPARATION

- 1. Check that all appropriate components are packed with your system (Figure 1). Refer to applicable Component Parts Breakdown (Figures 9, 11, 12, 13, or 14) for a complete list of parts.
- Determine locations for RO component installation.
 Two requirements for consideration are: access to cold water supply line and household sink drain pipe.
 Specific requirements are detailed in Table 1.

PRODUCT WATER FAUCET

Faucet may be installed in any convenient location. Make sure underside of location is free of obstructions

REVERSE OSMOSIS MODULE*

Module may be installed under sink or in any convenient location within 15 feet of source water supply and faucet.

STORAGE TANK

Tank may be placed in any space within 15 feet of faucet, generally under kitchen sink or in an adjacent unused cabinet.

Tubing length between components should be kept to a minimum, avoiding sharp bends or kinks.

* DO NOT PLACE MODULE WHERE IT WILL BE EXPOSED TO FREEZING AND/OR DIRECT SUNLIGHT.

Mount Module on side of cabinet using bracket (attached to Module) and two screws provided in the Installation Kit.

HOLD THE MODULE BY THE FILTER HOUSINGS WHEN PICKING UP OR CARRYING UNIT.

Table 1 Component Location Requirements

NOTE

THIS DRINKING WATER SYSTEM IS FOR USE ON POTABLE WATER SUPPLIES ONLY. SOURCE WATER EXCEEDING CHEMICAL PARAMETERS REQUIRES PRE-TREATMENT.

COMMONWEALTH OF MASSACHUSETTS PLUMBING CODES 248 CMR SHALL BE ADHERED TO. CONSULT WITH YOUR LICENSED PLUMBER FOR INSTALLATION OF THIS SYSTEM.

CAUTION

DO NOT USE WITH WATER THAT IS MICROBIOLOGICALLY UNSAFE OR OF UNKNOWN QUALITY WITHOUT ADEQUATE DISINFECTION BEFORE OR AFTER THE SYSTEM.

SYSTEMS CLAIMING CYST REDUCTION

SYSTEM MAY BE USED ON DISINFECTED WATER THAT MAY CONTAIN FILTERABLE CYSTS.

IF SIGNIFICANT INLET WATER PRESSURE DIFFERENTIALS OCCUR, PRESSURE REGULATOR MUST BE USED.

SMARTAP® WATER QUALITY MONITOR

Hydrotech[®] 101, 102, and 103 Series Reverse Osmosis Systems incorporate a proven performance indicator. Our *patented* Smartap[®] Water Quality Monitor uses dual probe LOGIC PULSE MEMORY technology to accurately indicate membrane performance. A split-second power pulse compares feed water Total Dissolved Solids (TDS) level with that of the product water. Then, by reversing the polarity of the electronic pulse, the probes are cleaned and kept free of chemical plating. A nine-volt alkaline battery provides power to the Monitor. To prolong battery life, indicator lights self-extinguish after a few seconds even if the button is being pressed or water is being dispensed. For optimum monitor performance, the battery should be replaced each time system is sanitized.

NOTE: Monitor Troubleshooting Indicators and Common Solutions are shown in Table 2 on Page 19.

THE SMARTAP® WATER QUALITY MONITOR IS AVAILABLE IN TWO MODELS

Pushbutton Actuated Smartap®

Pressing a test button located on the manifold cover activates monitor. When button is pressed, and momentarily held down, monitor reports membrane status by illuminating a light located next to test button. A green light means system is operating normally. A yellow light indicates system needs servicing (membrane may be depleted or fouled). While the button may be pressed at any time, the most accurate readings are obtained when the system is making water.

Faucet Actuated Smartap®

Monitor is activated by opening product water faucet or extra point-of-use device. When monitor is activated, it reports system status by illuminating a light appearing in a light bar located at faucet base (Chrome or Stainless Steel faucet) or integrated into faucet body front cover (Polymer faucet). A green light means system is operating normally. A yellow light means membrane may be depleted or fouled. An orange light means a trained technician should service the system.

INTER-COMPONENT CONNECTIONS

Connections between cold water supply line, RO Module, storage tank, product water faucet, and drain line are accomplished using plastic tubing and push-together quick-connect type fittings.

PLASTIC TUBING


- 1. Cut tube ends square and straight. Do not deform tube (i.e., cause tube to compress its diameter so it is no longer round).
- Make sure outer surface of tube is clear of marks or scratches for a length equal to twice tube diameter. This allows "O" ring to seat properly against tube.
- Avoid sharp changes in direction when routing tubing. Sharp turns cause tubing to flex and deform, which reduces its flow capacity and may increase lateral stress on the fittings, causing leakage.


QUICK-CONNECT FITTINGS

Fittings consist of two parts: a Body and a colored Collet. Collet color corresponds to tubing color to be used at that connection (Figure 2.A.).

- 1. To install a tube, push it through Collet until it seats firmly at bottom of fitting (Figure 2.A and 2.B.).
- 2. To remove a tube, push and hold Collet against Body while pulling tube out (Figure 2.C.).

NOTE: Systems are shipped with a plug in each fitting (prevents leakage of sanitizing fluid). Remove a plug in same manner as a tube.

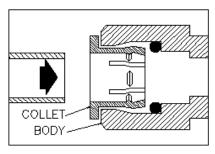

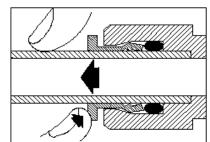

- A. Push tube through Collet into Body
- B. Tube must seat firmly at bottom of fitting
- C. Push Collet against Body to release tube

Figure 2 How to Use Quick-Connect Fittings

SADDLE TAPPING VALVE INSTALLATION ON COPPER TUBE

NOTE: State and local plumbing codes may prohibit use of saddle tapping valves. An Inlet Adapter Valve Assembly (P/N 42500004) is available as an alternate installation (See Page 5).

 Locate shut off valves on water lines under sink. To identify hot supply pipe and cold supply pipe, turn both faucets on and let water run. As water flows, hot water pipe becomes noticeably warmer.

CAUTION: DO NOT INSTALL FEED WATER ASSEMBLY ON HOT WATER LINE.

Turn off cold water supply by closing shut off valve.
 Drain line by opening sink faucet. Some mixing type faucets may require hot water supply be shut off as well.

NOTE: If no shut off valve is installed under sink, close main water valve during this installation.

All instructions refer to components shown in Figure 3.A. unless otherwise noted.

CAUTION: Do not turn valve handle before or while installing saddle tapping valve. Make sure piercing lance does not protrude beyond rubber gasket before installing valve.

- 3. Assemble saddle tapping valve assembly on tube.
 - a. Hold Back Plate against tube.
 - 3/8" O.D. and smaller tubing, use bracket with side projections.
 - 1/2" or larger tubing, use "V" side of bracket (See Figure 3.B.).
 - b. Hold Valve Saddle against tubing in a position directly opposite Back Plate.
 - c. Install screws far enough so Saddle and Back Plate are held securely against tube.
 - Rotate assembly so tubing connection is aligned toward RO Module input port.
 - Tighten screws evenly (brackets must be parallel). Tighten each screw firmly. Do not crush tube.

- 4. Connect source water tubing to valve housing using compression fitting.
 - a. Slide nut and sleeve onto tubing (in that order).
 - b. Install insert into plastic tubing.
 - Install tube with insert and sleeve into valve housing.
 - d. Thread compression nut onto housing, tighten.
- Connect tubing from saddle tapping valve to RO Module inlet elbow (Item 13 on Page 12, Figure 12 or Page 13, Figure 13).
- 6. Turn saddle tapping valve handle clockwise until it is firmly seated and piercing lance is fully extended.

NOTE: Supply line is pierced and valve is closed.

Do not open valve until system is activated (Page 15).

 Turn on cold water supply. Check saddle tapping valve installation for leaks. Allow water to run from faucet for a few minutes to clear any debris in the line caused by installation.

NOTE: If flow from sink faucet is reduced, clean faucet aerator.

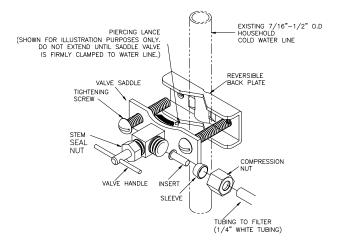


Figure 3A Saddle Tapping Valve Assembly P/N 34900001 installed on 3/8" O.D. Tubing

SADDLE TAPPING VALVE INSTALLATION ON THICK WALL PIPE

NOTE: State and local plumbing codes may prohibit use of saddle tapping valves. An Inlet Adapter Valve Assembly (P/N 42500004) is available as an alternate installation (See Page 5).

1. Locate and shut off source water supply line (see Page 3, Steps 1 and 2 with associated NOTES).

CAUTION: DO NOT INSTALL FEED WATER ASSEMBLY ON HOT WATER LINE.

CAUTION: Use a battery powered hand drill to avoid

shock hazard.

NOTE: If no shut off valve is installed under sink, close main water valve during this installation.

All instructions refer to components shown in Figure 3.B. unless otherwise noted.

Place a container or towel below shut-off valve to catch any remnant water.

Use a clean drill bit for this procedure.

- Drill a 3/8" hole in pipe. Hole must be located so that tubing connection will be oriented toward the RO Module input port.
- 3. Assemble saddle tapping valve assembly on tube.
 - a. Turn valve handle to expose lance beyond rubber gasket no more than 3/16".
 - b. Place Valve Saddle against pipe. Make sure lance fits into hole.
 - c. Hold Back Plate against tubing in a position directly opposite Valve Saddle.
 - d. Install screws far enough so Saddle and Back Plate are held securely against tube.
 - e. Tighten screws evenly (brackets must be parallel). Tighten each screw firmly. Do not crush tube.

- 4. Connect source water tubing to valve housing (see Page 3, Step 4).
- 5. Connect tubing from saddle tapping valve to RO Module inlet elbow (Item 13 on Page 12, Figure 12 or Page 13, Figure 13).
- 6. Turn saddle tapping valve handle clockwise until it is firmly seated and piercing lance is fully extended.

NOTE: Supply line is pierced and valve is closed.

Do not open valve until system is activated (Page 15).

 Turn on cold water supply. Check saddle tapping valve installation for leaks. Allow water to run from faucet for a few minutes to clear any debris in the line caused by installation.

NOTE: If flow from sink faucet is reduced, clean faucet aerator.

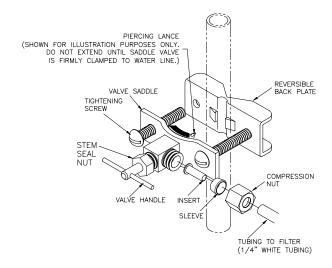


Figure 3B Saddle Tapping Valve Assembly P/N 34900001 installed on 7/16" – ½" O.D Tubing

ADDITIONAL POINT OF USE CONNECTION

NOTE: Icemakers typically use 1/4" tubing as feed line. Use a reducing union (P/N 33501043) for this connection.

- To connect an additional point of use (icemaker, extra faucet in wet bar and/or another use for treated water), place a "tee" connector (P/N 33501040) in 3/8" blue line between faucet and back of RO Module.
- Connect "tee" to point-of-use with 3/8" blue tubing (P/N 60602001). Connect tubing to point-of-use. Connector requirements are based on type of delivery device i.e., a typical icemaker uses 3/8" x 1/4" reducing device (P/N 33501043).

INLET ADAPTER VALVE INSTALLATION

NOTE: This assembly is offered as an optional installation method. Make sure it is approved for use under State and local plumbing codes before ordering kit (P/N 42500004).

NOTE: Use this assembly on U.S.N.P.T.* pipe thread fittings only.

CAUTION: DO NOT INSTALL FEED WATER ASSEMBLY ON HOT WATER LINE.

- Locate shut off valves on water lines under sink. To identify hot supply pipe and cold supply pipe, turn both faucets on and let water run. As water flows, hot water pipe becomes noticeably warmer.
- 2. Turn off cold water supply by closing shut off valve. Drain line by opening sink faucet. Some mixing type faucets may also require turning off hot water supply.

NOTE: If no shut off valve is installed under sink, close main water valve during this installation.

Place a container or towel below shut-off valve to catch any water remaining in pipe.

All item callouts refer to Figure 4 unless noted otherwise.


- 3. Disconnect cold water supply line to sink at inlet valve end of line.
- Insert rubber washer (Item 1) into inlet adapter (Item 2) and install adapter onto supply valve. Align outlet hole (in side of adapter) toward location of RO Module.

- 5. Replace existing rubber grommet on cold water supply line with grommet supplied in kit (Item 3).
- 6. Attach cold water supply line to inlet adapter.

NOTE: Use Teflon tape (P/N 35700002) on male threaded connections in Steps 4, 6, 7, and 8.

- 7. Install ball valve (Item 4) into inlet adapter.
- 8. Install male connector (Item 5) into inlet ball valve.
- Install ¼" white tubing (Item 6) from male connector to RO Module inlet elbow (Item 13 on Page 12, Figure 12 or Page 13, Figure 13).
- 10. Close inlet valve by turning handle so it is at a right angle (90°) to valve body.
- Turn on cold water supply. Check installation for leaks. Allow water to run from faucet for a few minutes to clear any debris in the supply line caused by this installation.

NOTE: If flow from faucet is reduced, clean faucet aerator.

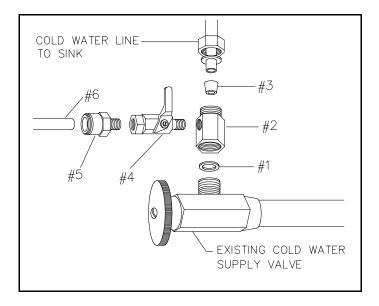

| Item | Description | Part No. |
|------|----------------------------------|----------|
| | Inlet Assembly | |
| 1 | Rubber Washer | 33400002 |
| 2 | Inlet Adapter 1/2" x 1/2" x 1/8" | 33201001 |
| 3 | Rubber Grommet | 33400003 |
| 4 | Inlet Ball Valve 1/8" | 34900002 |
| 5 | Male Connector 1/4" x 1/8" NPT* | 33503301 |
| | Component of Installation Kit | |
| 6 | Tubing, 1/4" White | 20300014 |

* United States National Pipe Thread

Figure 4 Inlet Adapter Assembly P/N 42500004 Installation and Parts Breakdown

DRAIN OUTLET ASSEMBLY INSTALLATION

NOTE: State and local plumbing codes may prohibit use of saddle tapping drain connections.

NOTE: Location and orientation of drain outlet assembly is vital to system performance.


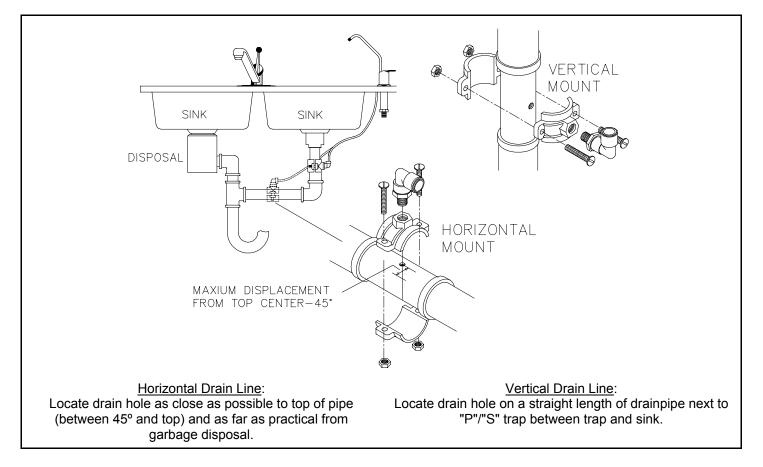


Figure 5 Drain Hole Location and Installation

1. Select a location for drain hole based on type of sink and orientation of drain line (Figure 5).

NOTE: Item callouts refer to Figure 6 unless noted otherwise.

- 2. Position drain outlet saddle (Item 1) on drainpipe. Allow adequate space for drilling operation.
- 3. Tighten saddle bolts evenly on both sides. Avoid overtightening.
- 4. Using opening in drain outlet saddle as a guide, drill a 3/8" to 7/16" diameter hole in drainpipe. Clean any debris out of drain saddle connection.
- 5. Install drain saddle stem adaptor (Item 2) fitting into drain saddle. Use Teflon tape (P/N 35700002) to seal threads between stem adapter and saddle.
- 6. Install union elbow (Item 3), onto stem adapter by pushing either end of elbow firmly onto stem.

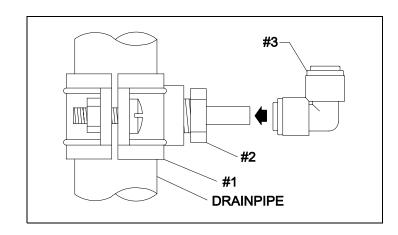

| Item | Description | Part No. |
|------|------------------|----------|
| 1 | Drain Saddle | 42000002 |
| 2 | Stem Adapter | 33503101 |
| 3 | 3/8" Union Elbow | 33503401 |

Figure 6 Drain Outlet Assembly

PRODUCT WATER FAUCET SITE PREPARATION

Refer to Faucet Installation Instructions (Pages 8 & 10) for site location and mounting hole specifications.

Primary considerations for site selection are convenience of use and an open area under sink.

Always check underside of selected location for obstructions.

PORCELAIN/ENAMEL OVER STEEL OR CAST IRON SINKS

NOTE: A heavy duty, variable speed drill motor is recommended for this procedure.

Use of a spring-loaded porcelain drill set is strongly recommended (Figure 7).

The plastic sleeve supplied on pilot drill (Figure 7.A) is to be positioned on drill bit against drill chuck. This prevents chuck from contacting porcelain after pilot hole has been completed.

Suggestion: Practice on discarded sinks to familiarize yourself with operation of porcelain cutter kit.

CAUTION: Avoid high motor R.P.M. during initial penetration of porcelain, as high drill speed will cause excessive chipping.

- 1. Using carbide tipped bit with plastic sleeve (Figure 7.A.), drill pilot hole completely through porcelain and metal underneath.
- Place spring-loaded porcelain saw (Figure 7.B.) into drill chuck. Make sure pilot guide is inserted tightly. Insert pilot guide into pilot hole. Push down gently on drill motor to apply light pressure to porcelain surface. Start drill motor turning as slowly as possible.

After initial cut has started, motor speed may be gradually increased. The cut may require three to four minutes to complete. Going faster could result in excessive chipping. Be sure a complete ring has been cut through porcelain to material underneath.

- Place finish hole saw (Figure 7.C.) into drill chuck.
 Make sure pilot guide is inserted tightly. Insert pilot guide into pilot hole. Begin cut using a slow speed and light pressure until porcelain (inside ring cut in Step 2) has been penetrated to material underneath.
- 4. Remove saw from hole and clean all debris from porcelain surface. Re-insert saw into hole and cut through remaining material.

TILE COUNTER TOP

 Follow procedures detailed in section labeled "Porcelain/Enamel Over Steel" (substitute "tile" for "Porcelain" in instructions).


STAINLESS STEEL SINK

- Use a center punch to make a small indentation to mark center of desired location.
- 2. Drill a pilot hole with a 1/8" metal drill bit, then enlarge hole with a 3/8" metal drill bit.
- 3. Complete hole size by using a 1 1/4" chassis punch available from your dealer (P/N 36201006).

NOTE: Installation hole is ready, install faucet.


A. PILOT DRILL



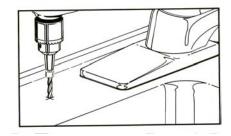

B. SPRING LOADED PORCELAIN SAW



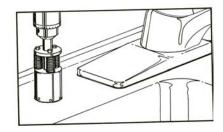

C. FINISH HOLE SAW



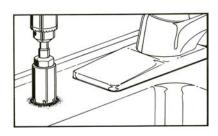


Figure 7 Porcelain Cutter Kit P/N 36201003

PRODUCT WATER FAUCET INSTALLATION - STAINLESS STEEL OR CHROME FAUCET

Install faucet on flat surface at least 2" in diameter. Unused 1 1/4" hole is ideal. Steps unique to a specific configuration are so noted. All other steps are common to either configuration.

New Faucet Installation

Refer to Faucet Site Preparation, Page 7.

Replacement Faucet Installation

Verify size of existing hole is $1 \frac{1}{2} \pm \frac{1}{4}$ ".

NOTE: Item callouts refer to Page 9, Figure 9 unless noted otherwise. Part numbers for each callout are specified according to faucet type:

Chrome-Plated Faucets (brass faucet nipple): Tables A and B.

Stainless Steel Faucets (copper faucet nipple): Tables C and D.

1. **Pushbutton Smartap®:** Verify faucet body, metal base washer, and rubber base washer are in place above sink (Items 2, 3, and 4).

Optional Faucet Smartap[®]: Verify faucet body, metal base washer, light bar base washer, light bar assembly, and washboard gasket are in place above sink (Items 2, 3, 15, 13, and 14).

- 2. Install 3/8" red tube on larger faucet barb. Install 1/4" red tube on smaller faucet barb. Install 3/8" blue tube into faucet connector (Item 9).
- 3. **Pushbutton Smartap®:** Insert all three tubes into mounting hole and place faucet over hole.

Optional Faucet Smartap®: Insert all three tubes and monitor cord into mounting hole and place faucet over hole.

NOTE: Do not pinch, kink, or otherwise deform monitor cord. Align cord with cutout in plastic spacer.

4. Install slotted washer, spacer, washer, and nut on faucet nipple below sink and snug them up. Be sure to align faucet properly before tightening. Do not over tighten.

- 5. Connect loose ends of tubing as follows:
 - a. 3/8" blue tubing to 3/8" swivel elbow located on rear of module.
 - b. 1/4" red tubing to 1/4" swivel elbow located on rear of module.
 - 3/8" red tubing to 3/8" swivel elbow on drain saddle.

NOTE: Red 3/8" tube connecting product water faucet to drain saddle must run vertically (or as closely as possible) with no sharp bends or loops (See Page 6, Figure 5).

- 6. Connect 3/8" white tubing between RO Module outlet and storage tank.
- 7. **Optional Faucet Smartap**[®]: Connect monitor cord to telephone-style connector located on manifold cover (Figure 8).

NOTE: The basic installation is complete and system is ready for activation (see Page 15).


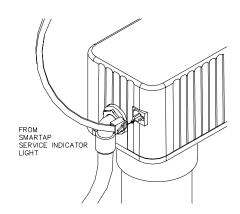


Figure 8 Connecting Monitor cord to Manifold.

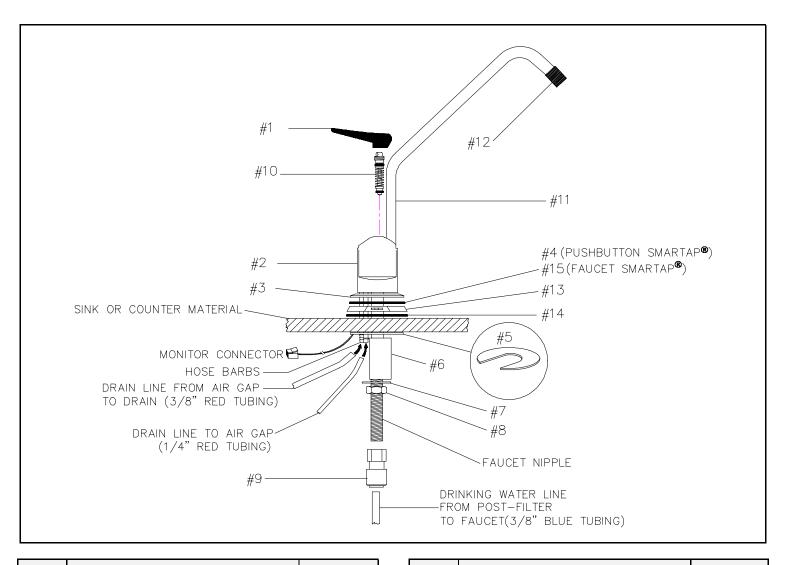

| A + B | + B Chrome Faucet with Light Bar 11701001 | | C + D | Stainless Steel Faucet with Light Bar | |
|-------|---|----------|-------|---------------------------------------|---|
| Item | Description | Part No. | | Item | Description |
| Α | Chrome Faucet | 40301001 | | С | Stainless Steel Faucet |
| 1 | Handle, Faucet | 35902032 | | 1 | Handle, Faucet |
| 2 | Body, Faucet - Chrome | 35902003 | | 2 | Body, Faucet - Stainless Steel |
| 3 | Washer, Faucet Base - Chrome | 35902078 | | 3 | Washer, Faucet Base - Stainless Steel |
| 4 | Washer, Rubber - Faucet Base | 35902080 | | 4 | Washer, Rubber - Faucet Base |
| 5 | Washer, Slotted | 35902105 | | 5 | Washer, Slotted |
| 6 | Spacer, Plastic | 21000001 | | 6 | Spacer, Plastic |
| 7 | Washer, Faucet | 35902104 | | 7 | Washer, Faucet |
| 8 | Nut, Faucet | 31901108 | | 8 | Nut, Faucet |
| 9 | Connector, Faucet - 3/8" x 7/16" | 33503302 | | 9 | Connector, Faucet - 3/8" x 7/16" |
| 10 | Kit, Rebuild Faucet - Chrome | 35903001 | | 10 | Kit, Rebuild Faucet - Stainless Steel |
| 11 | Spout, Long Reach - Chrome | 35902055 | | 11 | Spout, Long Reach - Stainless Steel |
| 12 | Sani tip, Black | 35902042 | | 12 | Sani tip, Black |
| В | Components - Optional Light Bar | Part No. | | D | Components - Optional Light Bar |
| 13 | Light Bar - 3 Indicator Lights | 41200001 | | 13 | Light Bar - 3 Indicator Lights |
| 14 | Gasket, Washboard F/M | 20400018 | | 14 | Gasket, Washboard F/M |
| 15 | Washer, Faucet Base Lt. Bar (replaces Item 4) | 21000002 | | 15 | Washer, Faucet Base Lt. Bar (replaces Item 4) |

| C + D | Stainless Steel Faucet with Light Bar | 11701002 |
|-------|---------------------------------------|----------|
| Itama | Description . | Down No. |
| Item | Description | Part No. |
| С | Stainless Steel Faucet | 40301004 |
| 1 | Handle, Faucet | 35902032 |
| 2 | Body, Faucet - Stainless Steel | 35902008 |
| 3 | Washer, Faucet Base - Stainless Steel | 35902079 |
| 4 | Washer, Rubber - Faucet Base | 35902080 |
| 5 | Washer, Slotted | 35902105 |
| 6 | Spacer, Plastic | 21000001 |
| 7 | Washer, Faucet | 35902104 |
| 8 | Nut, Faucet | 31901108 |
| 9 | Connector, Faucet - 3/8" x 7/16" | 33503302 |
| 10 | Kit, Rebuild Faucet - Stainless Steel | 35903002 |
| 11 | Spout, Long Reach - Stainless Steel | 35902061 |
| 12 | Sani tip, Black | 35902042 |
| | | · |
| D | Components - Optional Light Bar | Part No. |

41200001

20400018 21000002

Figure 9 Parts Breakdown, Air Gap Product Water Faucet Assemblies, Chrome, or Stainless Steel

PRODUCT WATER FAUCET INSTALLATION - POLYMER FAUCET

Install on flat surface at least 2 7/16" in diameter. Unused 1 1/4"- 1 7/16" opening is ideal.

New Faucet Installation

Refer to Faucet Site Preparation, Page 7.

Replacement Faucet Installation

Verify size of existing hole. If hole measures 1 7/16", Faucet may be installed without changes. If hole measures 1 1/4", remove two locator tabs (Figure 10) prior to installation by breaking them off at faucet base.

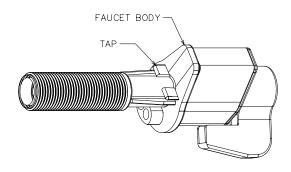


Figure 10 Faucet Locator Tabs and Air Gap.

- 1. Remove mounting nut and "U" bracket from faucet.
- 2. Install 3/8" blue tube into blue collet in faucet base.
- Plain Front: Insert three tubes into mounting hole and place faucet over hole. Align faucet body with narrow face forward.

Light Bar: Insert three tubes and monitor cord into mounting hole and place faucet over hole. Align faucet body with light bar forward.

NOTE: Do not pinch, kink, pull, or otherwise deform monitor cord.

Install "U" bracket and mounting nut below sink.
 Tighten mounting nut <u>by hand</u> so that faucet does not move. **Do not over tighten.**

NOTE: Faucet is packaged for right-hand operation. For left-hand operation, realign handle by completing Step 5.

NOTE: Item callouts in Step 5 refer to Page 11, Figure 11.


- 5. Align faucet knob for left-hand operation.
 - a. Rotate knob to rear of faucet (closed position).
 - b. Remove knob cover (Item 1) using a thin, flat tool to pry cover from knob.
 - Remove knob attachment screw (Item 2) using a Phillips-head screwdriver.
 - Remove knob (Item 3) by pulling it (by hand) straight up. Rotate handle counterclockwise 90°, and re-install knob.
 - e. Install knob attachment screw. Tighten screw until free movement (i.e., rocking) is eliminated.
 - f. Snap knob cover into place.
- 6. Install spout into faucet body. Lubricate "O" ring with FDA approved Silicone Lubricant. Align spout with faucet outlet, gently push spout to bottom of outlet.
- 7. Connect loose ends of tubing as follows:
 - a. 3/8" blue tubing to 3/8" swivel elbow located on rear of module.
 - b. 1/4" red tubing to 1/4" swivel elbow located on rear of module.
 - c. 3/8" red tubing to drain connection.

NOTE: Red 3/8" tube connecting faucet to drain connection must run vertically (or as closely as possible) with no sharp bends or loops (See Page 6, Figure 5).

 Light Bar: Connect monitor cord to module. Insert cord into a telephone-style connector located on module cover (See Page 8, Figure 8).

NOTE: The basic installation is complete and system is ready for activation (see Page 15).

CLEAN FAUCET SURFACE USING DISHWASHING DETERGENT ONLY. DO NOT USE ABRASIVES OR SOLVENTS.

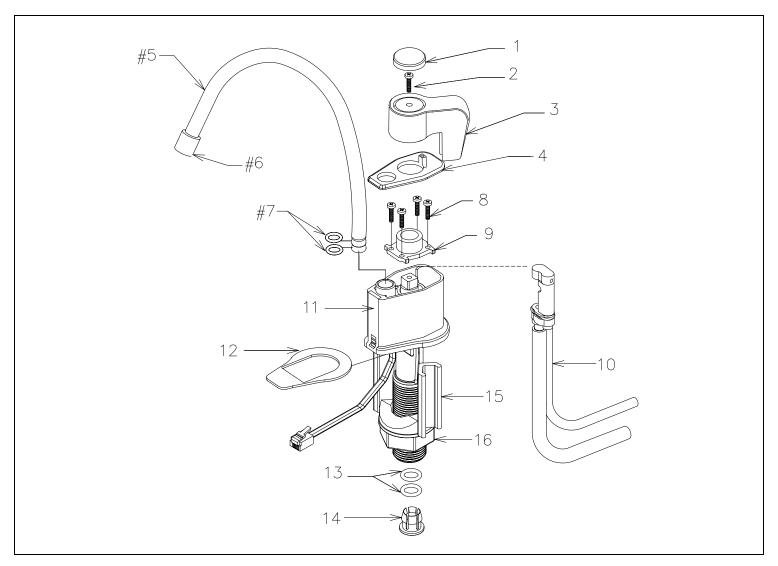

| Item | Description | Part No. |
|------|---|----------------------|
| 1 | Cover, Knob - Color Cover, Knob - Plated | 2080050* 3580050* |
| 2 | Screw, Knob | 32701021 |
| 3 | Knob, Faucet | 2080090* |
| 4 | Cover, Body - Color Cover, Body - Plated | 2081700* 3581700* |
| 5 | Spout, Faucet | 3580130* |
| 6 | Tip, Spout | 2080150* |
| 7 | "O" ring, Spout | 34201004 |

| Item | Description | Part No. |
|------|----------------------------|-----------------------|
| 8 | Screw, Bearing | 32701022 |
| 9 | Bearing | 20800101 |
| 10 | Air Gap Assembly | 40303800 |
| 11 | Body Assembly | 403039 [‡] * |
| 12 | Gasket, Sink | 20819001 |
| 13 | "O" ring, Tube Spacer/Stop | 34201019 |
| 14 | Collet 3/8" Blue | 33502005 |
| 15 | Bracket, Mounting | 20800301 |
| 16 | Nut, Mounting | 20821001 |

SEVENTH DIGIT OF PART NUMBER IS CODE SPECIFYING FAUCET BODY CONFIGURATION ‡ Code 0 designates faucet body with plain front. Code 1 designates faucet body with 1 LED. Code 2 designates faucet body with 2 LED. Code 3 designates faucet body with 3 LED. Example: 40303935 is a Faucet Body Assembly (3 LED) EIGHTH DIGIT OF PART NUMBER IS CODE SPECIFYING PART COLOR.

Codes 1 (White), 3 (Almond), 4 (Black) designate plain color parts and assemblies. Codes 0 (Chrome/Black), 2 (Chrome/White), 6 (Satin/Black), and 8 (Satin/White) designate electro-plated parts and assemblies. Codes 5 (Chrome/Black) and 7 (Chrome/White) designate vacuum-metalized parts and assemblies.

Example: 20800903 is a Faucet Knob in Almond or 40303930 is a Faucet Body Assembly in EP/Chrome with Black Light Bar (3 LED).

Figure 11 Parts Breakdown, Air Gap Product Water Faucet, Polymer Plain Front P/N 114002^{‡*} and Light Bar P/N 114004^{‡*}

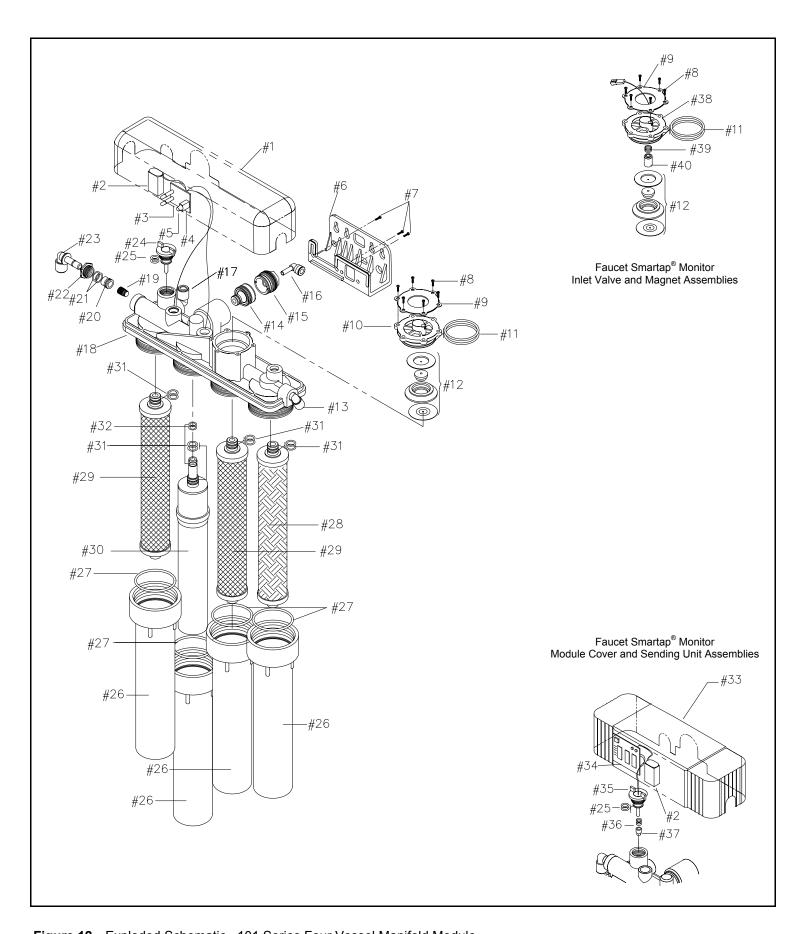


Figure 12 Exploded Schematic , 101 Series Four Vessel Manifold Module

| Item | Description | Part No. |
|-----------|---|----------------------|
| 1 | Cover, 4-vessel Manifold – Pushbutton | 42100002 |
| 1A | Cover, 3-vessel Manifold – Pushbutton | 42100001 |
| 2 | Battery, 9-volt alkaline | 31300001 |
| 3 | Monitor, Water Quality - Smartap [®] | 40200002 |
| 4 | Guard, Pushbutton | 20500050 |
| 5 | Pushbutton, Monitor | 20500080 |
| 6 | Bracket, Mounting | 21100001 |
| 7 | Screw, Mounting Bracket | 32701002 |
| 8 | Screw, Retaining Plate | 32701001 |
| 9 | Plate, Retaining - Inlet Valve Cover | 31900041 |
| 10 | Cover, Inlet Valve | 20500066 |
| 11 | "O" Ring, Inlet Valve Cover | 34201024 |
| 12 | Shut Off Assembly | 40600010 |
| 13 | Elbow, 1/4" Stem w/white collet | 33503502 |
| 14 | Flow Control (by Model) | |
| | Model 10103/10203/10303, Red Tape Model 10104/10204/10304, Yellow Tape | 40600003 40600004 |
| | Model 10105/10205, Black Tape | 40600004 |
| | Model 10106/10206, Purple Tape | 40600006 |
| | Model 10107/10207, Orange Tape | 40600007 |
| 15 | Cap, Flow Control | 40600001 |
| 16 | Elbow, 1/4" Stem w/red collet | 33503505 |
| 17 | Elbow, 3/8" Stem w/blue collet | 33503503 |
| 18 | Manifold Sub-Assembly, 4 vessel | 41300040 |
| 18A | Manifold Sub-Assembly, 3 vessel | 41300022 |
| 19 | Check valve, Duckbill | 42500014 |
| 20 | Stop, Tube | 20500094 |
| 21 | "O" Ring, Collet Retainer | 34201033 |
| 22 | Retainer Assembly, Outlet | 40600033 |
| 23 | Elbow, 3/8" Stem w/white collet | 33503504 |
| 24 | Plug, Switch Housing | 20500026 |
| 25 | "O" Ring, Switch Housing Plug | 34201021 |
| 26 | Housing, Filter | 20500023 |
| 27 | "O" Ring, Filter Housing | 34201026 |
| 28 | Cartridge, String-Wound Pre-Filter | 41400008 |
| 29 | Cartridge, Carbon CTO | 41400009 |
| 30 | Filter, Membrane Thin Film Composite Model 10103/10203, Green Casing Red Tape | 41400003 |
| | Model 10103/10203, Green Casing Red Tape Model 10104/10204, Green Casing Yellow Tape | 41400004 |
| | Model 10105/10205, Green Casing Black Tape | 41400005 |
| | Model 10106/10206, Green Casing Purple Tape | 41400006 |
| | Model 10107/10207, Green Casing Orange | 41400007 |
| 30A | Tape | 41400001 |
| | Filter, Membrane Cellulose Triacetate Model 10303, Blue Casing, Red Tape | 41400001 |
| 31 | Model 10303, Blue Casing, Red Tape Model 10304, Blue Casing, Yellow Tape | 34201010 |
| 32 | "O" Ring, Cartridge | 34201006 |
| | "O" Ring, Membrane Flow Tower | |
| | Ontional Fauget Smorter® Monitor | 40400004 |
| 33 33A | Optional Faucet Smartap® Monitor | 42100004 42100003 |
| | Cover, 4-vessel Manifold - Faucet Monitor | 40200012 |
| 34 | Cover, 3-vessel Manifold - Faucet Monitor | 40200012 |
| 35 | Monitor, Faucet Smartap® Monitor | 31900025 |
| 36 | Sending Unit, Flow Switch | 40600013 |
| 37 | Spring, Flow Switch | 40600013 |
| 38 | Magnet, Flow Switch | 31900026 |
| 39 40 | Cover Assembly, Inlet Valve | 40600011 |
| 40 | Spring, Inlet Valve | 70000011 |
| | Magnet, Inlet Valve | |
| I | | |



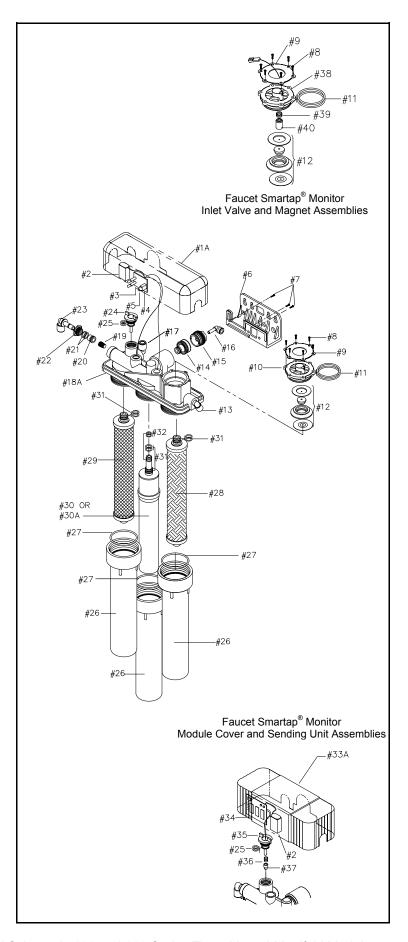



Figure 13 Parts Breakdown, 101/102/103 Series, Exploded Schematic 102 and 103 Series Three Vessel Manifold Module

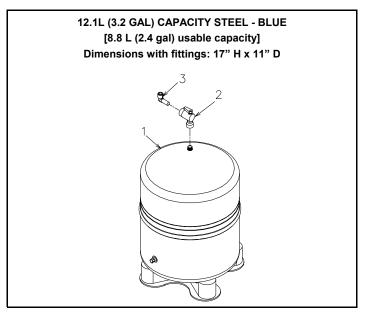


| Item | Description | Part No. |
|------|------------------------------------|----------|
| | Storage Tank Assembly | 42600001 |
| 1 | Tank, Product Water Storage - Blue | 34500001 |
| 2 | Valve, Shut-off | 33503601 |
| 3 | Elbow, 3/8" Stem w/white collet | 33503504 |

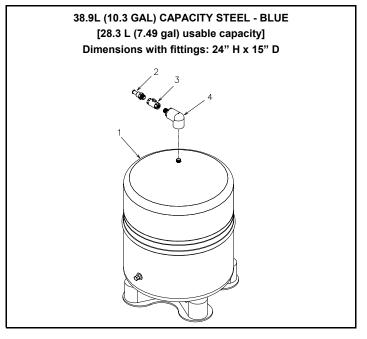

| Item | Description | Part No. |
|------|---------------------------------------|----------|
| | Storage Tank Assembly | 42600003 |
| 1 | Tank, Product Water Storage - Blue | 34500002 |
| 2 | Valve, Shut-off 1/4" MNPT X 1/4" FNPT | 34900007 |
| 3 | Connector, 3/8" x 1/4" MNPT | 33501020 |
| 4 | Elbow Assembly, 3/4" FNPT x 1/4" FNPT | 40900035 |

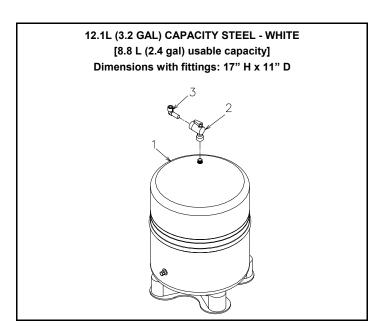

| Item | Description | Part No. |
|------|-------------------------------------|----------|
| | Storage Tank Assembly | 42600017 |
| 1 | Tank, Product Water Storage - White | 34500003 |
| 2 | Valve, Shut-off | 33503601 |
| 3 | Elbow, 3/8" Stem w/white collet | 33503504 |

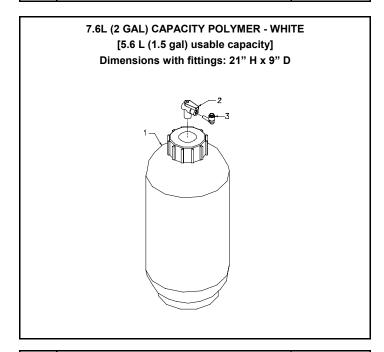

| Item | Description | Part No. |
|-------------|---|----------------------------------|
| | Storage Tank Assembly | 426000021 |
| 1 2 3 | Tank, Product Water Storage - White Valve, Shut-off Elbow, 3/8" Stem w/white collet | 34500004 33503601 33503504 |

Figure 14 Parts Breakdown, Product Water Storage Tank Assemblies

ACTIVATING THE SYSTEM

NOTE: Make sure all water supply lines, drain lines, and fittings are secure and free from leakage.

- 1. Open source water supply valve. Close product water faucet. Check for leakage.
- 2. Turn tank valve one-quarter turn counter- clockwise to open valve (handle should be in line with tubing as it enters connection).
- 3. Confirm system is producing water. Module will be sending rinse water to drain.

NOTE: Battery is located inside manifold cover.

Use caution when working with manifold cover. Wiring therein connects monitor components. If wires, circuit board, or connections are damaged and/or wetted, monitor will not function.

Connect battery to monitor after system has been in production mode for at least 5 minutes. This ensures sensing switch is in proper position to record data.

Item Callouts refer to Page 12, Figure 12 (101 Series) or Page 13, Figure 13 (103 Series) unless noted otherwise.

- Loosen mounting bracket screws (Item 7). Gently pull module cover (Item 1) up and away from the manifold body.
- 5. Connect battery (Item 2) by pressing clip onto battery terminals (Page 18, Figure 15).
- 6. Replace module cover and tighten screws.
- Test battery connection by activating monitor. Open product water faucet or press pushbutton, whichever is applicable. If an indicator light illuminates, connection is good.

NOTE: Close faucet immediately after light illuminates.

Test is to confirm battery connection, not water quality.

- 8. Open product water faucet and let water flow until all air has been expelled from system. Lock faucet open by rotating handle 90° or by lifting handle, whichever is applicable.
- 9. Close product water faucet. In 30 minutes, check connections for leaks and correct if necessary.

<u>Icemaker/Extra point of use</u>: Check connections on these supply lines for leaks.

10 Allow storage tank to fill overnight.

DO NOT USE THE FIRST FULL STORAGE TANK OF WATER

11 Discard (to drain) first full tank of water by opening product water (and extra point-of-use) faucet until water flow stops, then close faucet. This will flush sanitizing solution from system.

<u>Icemaker</u>: Let tray/bin fill with ice cubes. Discard all ice cubes. This flushes sanitizing solution from lines to icemaker.

NOTE: System is ready to use. Should there be any aftertaste or odor to water or ice cubes, repeat Steps 10 and 11.

DO NOT USE THE FIRST STORAGE TANK OF WATER

Allow storage tank to fill overnight. Dispense this water to drain.

This process removes factory-installed sanitizing solution from the entire system and sends it to drain.

This process also sanitizes fittings and tubing used during installation.

KEY COMPONENTS

MEMBRANES AND FILTERS

| Membrane - Cellulose Triacetate | Part No. | Membrane - Thin Film Composite | Part No. | Filter | Part No. |
|--|----------------------|---|----------------------------------|---|----------------------|
| Blue Casing Model 10303 - Red Tape Model 10304 - Yellow Tape | 41400001 41400002 | Green Casing Models 10103/10203 - Red Tape Models 10104/10204 - Yellow Tape | 41400003 41400004 | Sediment Filter - Black Cap Carbon Filter CTO - Blue Cap | 41400008 41400009 |
| | | Models 10105/10205 - Black Tape Models 10106/10206 - Purple Tape Models 10107/10207 - Orange Tape | 41400005 41400006 41400007 | | |

PRODUCT WATER FAUCETS AND STORAGE TANKS

| Starrings Storr 100 100 100 | Air Gap Faucet | Part No. | Air Gap Faucet | Part No. | Storage Tanks | Part No. | Storage Tanks | Part No. |
|---|----------------|----------|----------------|----------|---------------|----------|---------------|----------------------|
| | | | | | ` | | | 42600003 42600021 |

*Color Suffix Codes

EPChrome/Black = 0, White = 1, EPChrome/White = 2, Almond = 3, Black = 4, Chrome/Black = 5, Satin/Black = 6, Chrome/White = 7, Satin/White = 8

PARTS AND SERVICE AVAILABLE THROUGH YOUR HYDROTECH® DEALER

ROUTINE MAINTENANCE

| RECOMMENDATIONS | | | | | |
|--|---|--|--|--|--|
| HAVE ALL COMPONENTS ON HAND AND READY BEFORE BEGINNING PROCEDURE. A CLEAN WORK AREA AND EQUIPMENT ARE ESSENTIAL TO PROPERLY CLEAN AND/OR SANITIZE THE SYSTEM. (i.e., CLEAN HANDS, TOOLS, WORK SURFACE, AND CONTAINERS) | | | | | |
| Service Requirements | Recommended Service Intervals | | | | |
| To insure the system operates at its optimum level, certain routine maintenance must be performed. Frequency of maintenance performance will depend on feed water quality and level of system usage. CLEAN: Each time filters are replaced | Replace filters as required or every 6 to 12 months depending on feed water quality. Replace membrane as required based on Smartap® Water Quality Monitor indication or periodic TDS rejection tests. | | | | |
| SANITIZE: At least once a year and each time membrane is replaced | Maximum recommended service life for membrane is 60 months. | | | | |

| EQUIPMENT NEEDED | | | | | |
|--|---------------------|----------------------------|--|--|--|
| Safety glasses Household bleach - Unscented Only Plastic bucket | | | | | |
| Rubber gloves, sanitary (5 1/4% sodium hypo chlorite) Plastic bowl | | | | | |
| Wash Cloth, Clean and Lint-free | Plastic storage bag | "O" ring Lube FDA Approved | | | |
| Liquid dish soap | Manual Air Pump | (P/N 30300026) | | | |

| REPLACEMENT FILTER SETS | | | | |
|--|---|--|--|--|
| 101 SERIES P/N 41400008 Sediment Filter (1 each) P/N 41400009 CTO Carbon Filter (2 each) | 102 AND 103 SERIES P/N 41400008 Sediment Filter (1 each) P/N 41400009 CTO Carbon Filter (1 each) | | | |
| REPLACEMENT MEMBRANES | | | | |
| 101 AND 102 SERIES P/N 41400003, Model 10103 or 10203, Red Tape P/N 41400004, Model 10104 or 10204, Yellow Tape P/N 41400005, Model 10105 or 10205, Black Tape P/N 41400006, Model 10106 or 10206, Purple Tape P/N 41400007, Model 10107 or 10207, Orange Tape | 103 SERIES P/N 41400001, Model 10303, Red Tape P/N 41400002 Model 10304, Yellow Tape NOTE Verify membrane type by casing color (TFC is green, CTA is blue) Verify GPD rating (match tape color on membrane to tape on Flow Control) | | | |
| "O" RINGS | | | | |
| P/N 34201010 Sediment or Carbon Cartridge to Port P/N 34201026 Filter Housing | P/N 34201010 Membrane to Flow Tower, Lower P/N 34201006 Membrane Flow Tower, Upper | | | |

CLEANING, SANITIZING, AND CARTRIDGE REPLACEMENT PROCEDURE

- 1. Mix mild cleaning solution of dish soap and clean potable water in plastic bowl.
- Empty storage tank and relieve system pressure.
 Verify tank valve is open. Close feed water supply valve and open product water faucet.

<u>Icemaker</u>: Transfer ice cubes from bin/tray to clean freezer container for storage until procedure is done.

 Check product water storage tank air pre-charge using low-pressure gauge (P/N 34002024). Air valve is located on tank base. Pre-charge should be 55 kPa (8 psig) with tank empty and tank valve open.

NOTE: Use air hand pump to avoid damaging tank. Verify product water valve is open before proceeding.

Additional point-of-use devices (i.e., icemakers) may use filters along their supply line. Remove any filter or treatment device installed between module and delivery device before proceeding.

Do not attempt to remove filter housings until water flow stops. This reduces pressure inside the system so housings may safely be removed.

4. Remove each filter/membrane housing by turning it counter-clockwise. Remove each filter cartridge as its housing is removed. Discard filters.

NOTE: If membrane is performing satisfactorily, proceed to Step 5. If membrane is depleted or fouled, discard it and go to Step 7.

Use sanitary rubber gloves for this procedure to avoid contaminating sanitizing solution, filters, or membrane. Wear gloves whenever cleaning/sanitizing system components or handling new filter/membrane cartridges.

- Clean membrane outer wrap with washcloth and cleaning solution. Do not immerse membrane in solution. Do not scrub membrane wrap with abrasive cleaners. Rinse membrane well with clean potable water.
- 6. Place membrane into clean plastic bag, close bag.
- 7. Remove filter/membrane housing "O" rings and wash them with cleaning solution. Rinse them well with clean potable water. Inspect them for damage (i.e., nicks, scratches). Replace damaged "O" rings.

NOTE: Use caution when cleaning module. Do not get Smartap[®] Water Quality Monitor electronics, wiring, or connectors wet.

- 8. Clean filter housings and manifold ports, inside and outside, with washcloth and cleaning solution. Do not use abrasive materials.
- 9. Rinse manifold/housings with clean potable water.
- Inspect manifold and filter housing "O" ring groove area for damage (i.e., nicks or scratches). Replace damaged components.
- Place a small amount of "O" ring lubricant over surface of filter/membrane housing "O" ring. Install "O" ring into filter housing groove.

TO SANITIZE THE SYSTEM: Complete Steps 12-34. TO INSTALL FILTERS: Complete Steps 19-34.

CAUTION: WEAR SAFETY GLASSES WHILE PERFORMING THIS PROCEDURE.

EXCESSIVE CONCENTRATIONS OF BLEACH WILL DAMAGE PLASTIC AND RUBBER COMPONENTS. Rinse all parts that contact bleach thoroughly with clean potable water.

Read "WARNINGS" information on bleach container before using contents.

Handle sanitizing solution carefully. Avoid contact with unprotected areas.

- 12. Mix sanitizing solution of 1.5 ml (1/3 teaspoon) of household bleach and 3.8 L (1 gallon) of clean, potable water in the bucket. Mix solution well.
- 13. Add 236 ml (one cup or 8 oz.) of sanitizing solution to each filter housing and install them onto the manifold (do not install filters or membrane at this time). Tighten each filter housing by hand only.

NOTE: TIGHTEN FILTER HOUSINGS BY HAND ONLY. Do not use tools as they will over-tighten and damage housings.

- 14. Slowly open source water supply valve.
- 15. Open product water faucet. Close faucet as soon as water begins to flow from spout.
- 16. Wait 5 minutes, then close source water supply valve.
- 17. Wait 25 minutes, then open product water faucet and let water flow to drain.

NOTE: Do not attempt to remove filter housings until water flow stops. This reduces pressure inside the system so housings may safely be removed.

CLEANING, SANITIZING, AND CARTRIDGE REPLACEMENT PROCEDURE

18. Remove filter housings and dispose of water. Rinse filter housings and manifold ports thoroughly with clean potable water.

NOTE: Do not remove protective plastic bag from replacement filter and membrane cartridges.

- Install "O" rings into filter housings. Open top of filter bag enough to expose filter cap and "O" ring grooves. Place a small amount of "O" ring lubricant on surface of each "O" ring.
- 20. Install filter and membrane cartridges. Hold cartridge by its protective plastic bag and insert cartridge into manifold turning it 1/4 turn as it enters the port. Refer to Page 12, Figure 12, or Page 13, Figure 13 for location of each cartridge. Slide bag from cartridge and discard. Replace each filter housing as each cartridge is installed.

NOTE: TIGHTEN FILTER HOUSINGS BY HAND ONLY. Do not use tools as they will over-tighten and damage housings. Take care not to cut or pinch "O" rings.

- 21. Turn feed water valve slowly to open position.
- 22. Confirm system is producing water. Unit will be sending rinse water to drain.

TO REPLACE BATTERY: Perform Steps 23 - 29

NOTE: Battery is located inside module cover.

Use caution when working inside module cover. Wiring therein connects monitor components. If wires, circuit board, or connections are damaged and/or wetted, monitor will not function.

Replace battery after system has been in production mode for at least 5 minutes. This ensures sensing switch is in proper position to record data.

- 23. Remove module cover (Page 15, Step 4).
- 24. Disconnect battery. The battery connection is a snap type connector (Figure 15).
- 25. Remove battery by sliding it out of its holder.

NOTE: Replace battery with a new alkaline 9-volt battery (P/N 31300001).

26. Carefully slide battery into its holder.

NOTE: Use caution when reconnecting the battery (Figure 15).

- 27. Connect battery by pressing clip onto battery terminals.
- 28. Test battery connection by activating monitor. Open product water faucet. If an indicator light illuminates, connection is good.

NOTE: Close faucet after light illuminates. Test confirms connection, not water quality.

- 29. Replace module cover (Page 15, Step 6).
- 30. Open product water faucet. Let water flow until all air has been expelled from the system.
- 31. Close product water faucet. Wait 30 minutes, check connections for leaks, and correct if necessary.

Icemaker/Extra point of use: Check lines for leaks.

32. Allow storage tank to fill overnight.

DO NOT USE THE FIRST FULL STORAGE TANK OF WATER

 Discard (to drain) first full tank of water by opening product water faucet until water flow stops, then close faucet. This flushes sanitizing solution from system.

<u>Icemaker</u>: Let tray/bin fill with ice cubes. Discard all ice cubes to drain. This flushes sanitizing solution from lines to icemaker. Replace delivery device filter (if applicable).

NOTE: System is ready to use. Should there be any aftertaste or odor, drain storage tank and repeat Steps 32 and 33.






Figure 15 Smartap® Battery Connections

DO NOT USE THE FIRST FULL STORAGE TANK OF WATER

Allow reservoir to fill overnight. Dispense this water to drain.

This process removes sanitizing solution from system, sanitizes fittings and tubing, and sends solution to drain.

| HYDROTECH® TROUBLE SHOOTING GUIDE | | | | | |
|--|--|--|--|--|--|
| WATER VOLUME AND QUALITY | | | | | |
| Symptom Condition Action | | | | | |
| No product water. | Water supply is turned OFF. | Turn water ON. | | | |
| Not enough product water. | Low water pressure. Water supply is blocked. Storage tank valve is closed. Storage tank is depleted. Clogged Pre-filter cartridge(s). Storage tank air pressure charge is low. | Check source water line pressure. Clear restriction. Open storage tank valve. Increase product water storage capacity and/or install membrane and flow control with higher output rating. Replace Pre-filter cartridge(s). Empty water from storage tank (product water valve must remain open while adjusting pressure) and adjust pressure to 55 kPa (8 psig). | | | |
| System does not shut off. | Shut-off valve is not closing. | Contact your Hydrotech® Dealer. | | | |
| No drain water. | Clogged Flow Control. | Replace Flow Control. | | | |
| Water has offensive taste and/or odor. | Carbon post-filter is depleted. Membrane depleted or fouled. | Drain storage tank, sanitize system, and replace carbon post-filter cartridge. Smartap® Monitor reads yellow, or if TDS test is unsatisfactory, drain storage tank, sanitize system, and replace membrane. | | | |
| | Sanitizer not flushed out. | Drain storage tank and let it refill overnight. | | | |
| Symptom | LEAKAGE AND Probable Cause | Solution | | | |
| Leak at fitting. | Tubing not pushed completely into fitting. Defective tube. | Push tube into fitting past "O" ring seal. Cut damaged area from tube or replace tube (See Page 2, Figure 2). | | | |
| Leak at filter housings. | "O" ring has not seated properly. "O" ring has nicks or scratches. | Remove "O" ring and inspect "O" ring groove for debris. Clean groove, lube, and reseat "O" ring. Replace "O" ring. | | | |
| Leak from air gap in faucet. | Restricted drain tube. Tubing from air gap to drain is routed incorrectly. | Clear restriction. Reroute tubing so tubing runs vertically with no sharp bends or loops. | | | |
| | PUSHBUTTON ACTUATED SMARTAP | WATER QUALITY MONITOR | | | |
| Indication | Condition | Action | | | |
| Green Light. | System operating normally. | None. | | | |
| Yellow Light. | Low or non-usage. Membrane depleted or fouled. | Draw one quart of water from Module. Wait 10 minutes, test. Clean and sanitize system. Replace membrane. | | | |
| Dim or No Light. | Battery voltage low. | Replace Battery. | | | |
| | FAUCET ACTUATED SMARTAP® W | ATER QUALITY MONITOR | | | |
| Indication | Probable Cause | Solution | | | |
| Green Light. | System operating normally. | None. | | | |
| Orange Light (appears with green or yellow light). | Shut-off valve is not closing. | Contact your Hydrotech [®] Dealer. | | | |
| Yellow Light. | Membrane depleted or fouled. | Clean and sanitize system. Replace membrane. | | | |
| No Monitor Light. | Light Assembly not connected. | Plug connector into phone jack and check all other monitor connections. Replace battery. | | | |

 Table 2 System Troubleshooting Indicators and Common Solutions.

NOTES

NOTES

INSTALLATION AND SERVICE RECORD

| DATE INSTALLED | SYSTEM/N | SYSTEM/MEMBRANE OUTPUT RATING | | | LPD/GPD | |
|----------------------------|---------------|-------------------------------|-----------|-------------|---------|-----------------|
| | | | | | | |
| DATE SERVICED | _ | SERVICED | BY | | COMPANY | |
| SERVICE PERFORMED | □ CLEANIN | NG ONLY | □ CLEANII | NG & SANITI | IZING | □ REPAIR |
| FILTERS REPLACED SEDIMEN | Т | □ CARBON | 1 (PRE) | | ANE | □ CARBON (POST) |
| COMMENTS | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| DATE SERVICED | | SERVICED |) BY | | COMPANY | |
| SERVICE PERFORMED | CLEANIN | NG ONLY | □ CLEANII | NG & SANITI | IZING | □ REPAIR |
| FILTERS REPLACED SEDIMEN | T | □ CARBON | N (PRE) | | ANE | ☐ CARBON (POST) |
| COMMENTS | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| DATE SERVICED | | SERVICED | BY | | COMPANY | |
| SERVICE PERFORMED | CLEANIN | NG ONLY | □ CLEANII | NG & SANITI | IZING | □ REPAIR |
| FILTERS REPLACED SEDIMEN | T | □ CARBON | 1 (PRE) | □ MEMBRA | ANE | □ CARBON (POST) |
| COMMENTS | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| DATE SERVICED | | SERVICED |) BY | | COMPANY | |
| SERVICE PERFORMED | □ CLEANIN | NG ONLY | □ CLEANII | NG & SANITI | IZING | □ REPAIR |
| FILTERS REPLACED SEDIMEN | T | □ CARBON | 1 (PRE) | □ MEMBRA | ANE | □ CARBON (POST) |
| COMMENTS | | | | | | |
| | | | | | | |
| | | | | | | |

INSTALLATION AND SERVICE RECORD

| DATE INSTALLED | | SYSTEM/N | SYSTEM/MEMBRANE OUTPUT RA | | | LPD/GPD | |
|------------------|-----------|-----------|---------------------------|---------|---------------|---------|-----------------|
| | | | | | | | |
| DATE SERVICED | | | SERVICED | D BY | | COMPANY | |
| SERVICE PERFORME | D | □ CLEANIN | NG ONLY | □ CLEAN | IING & SANITI | ZING | □ REPAIR |
| FILTERS REPLACED | SEDIMEN | NT | □ CARBON | N (PRE) | □ MEMBRA | ANE | ☐ CARBON (POST) |
| COMMENTS | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| DATE SERVICED | | | SERVICED | D BY | | COMPANY | |
| SERVICE PERFORME | D | □ CLEANIN | NG ONLY | □ CLEAN | IING & SANITI | ZING | □ REPAIR |
| FILTERS REPLACED | □ SEDIMEN | VT | □ CARBO | N (PRE) | □ MEMBRA | ANE | ☐ CARBON (POST) |
| COMMENTS | | | | | | | |
| | | | | | | | |
| | | _ | | | , | _ | |
| | | | | | | | |
| DATE SERVICED | | | SERVICED |) BY | | COMPANY | |
| SERVICE PERFORME | D | □ CLEANIN | NG ONLY | □ CLEAN | IING & SANITI | ZING | □ REPAIR |
| FILTERS REPLACED | SEDIMEN | NT | □ CARBON | N (PRE) | □ MEMBRA | ANE | ☐ CARBON (POST) |
| COMMENTS | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| DATE SERVICED | | | SERVICED |) BY | | COMPANY | |
| SERVICE PERFORME | D | □ CLEANIN | NG ONLY | □ CLEAN | IING & SANITI | ZING | □ REPAIR |
| FILTERS REPLACED | □ SEDIMEN | ١T | □ CARBON | N (PRE) | □ MEMBRA | ANE | ☐ CARBON (POST) |
| COMMENTS | | | | | | | |
| | | | | | | | |
| | | | | | | | |

LIMITED WARRANTY

Subject to the conditions and limitations described below, Hydrotech® warrants its Model 101/HTF, 102/HT, and 103/HT Series Reverse Osmosis Drinking Water Treatment Systems (excluding cartridge filters and battery), when installed in accordance with Hydrotech® specifications, to be free from defects in materials and workmanship under normal use within the operating specifications for a period of two (2) years from the date of purchase. Hydrotech® also warrants the Smartap® Water Quality Monitor to be free from defects in materials and workmanship under normal use within the operating specifications for a period of five (5) years from the date of purchase. This warranty shall apply only to the original end-user of the drinking water system.

Other than the cartridge filters and battery, any part found defective within the terms of this warranty will be repaired or replaced by Hydrotech[®]. If any part is found defective, Hydrotech[®] also reserves the right to replace the drinking water appliance with a comparable Hydrotech® drinking water system of equal or greater quality. You pay only freight for repaired or replaced parts from our factory and local dealer charges, including but not limited to labor charges, travel and transportation expenses and handling fees.

This warranty shall not apply to any part damaged by accident, fire, flood, freezing, Act of God, bacterial attack, membrane fouling and/or scaling, sediment, misuse, misapplication, neglect, alteration, installation, or operation contrary to our printed instructions, or by the use of accessories or components which do not meet Hydrotech® specifications. If the drinking water system is altered by anyone other than Hydrotech® the warranty shall be void.

ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THE PERIOD SPECIFIED ABOVE FOR THE PARTS DESCRIBED IN THIS LIMITED WARRANTY.

As a manufacturer, we do not know the characteristics of your water supply. The quality of water supplies may vary seasonably or over a period of time. Your water usage may vary as well. Water characteristics can also change if the drinking water appliance is moved to a new location. For these reasons, we assume no liability for the determination of the proper equipment necessary to meet your requirements, and we do not authorize others to assume such obligation for us. Further, we assume no liability and extend no warranties, express or implied, for the use of this product with a non-potable water source or a water source which does not meet the conditions for use as described in this Owners Guide.

HYDROTECH'S OBLIGATIONS UNDER THIS WARRANTY ARE LIMITED TO THE REPAIR OR REPLACEMENT OF THE FAILED PARTS OF THE DRINKING WATER SYSTEM, AND WE ASSUME NO LIABILITY WHATSOEVER FOR DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, GENERAL OR OTHER DAMAGES, WHETHER FROM CORROSION OR OTHER CAUSES.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Similarly, some states do not allow the exclusion of incidental or consequential damage, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.



Hydrotech, Inc.

25555 West Avenue Stanford, Valencia, CA 91355 Phone (661) 294-8888 Fax (661) 294-8880

Form IGRO-05 01/02 © Copyright 2002 Hydrotech, Inc.